

3.1 Control elements overview

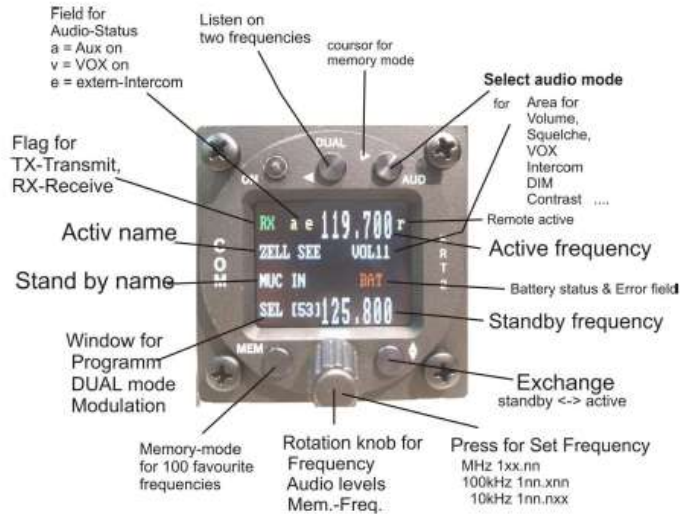


Figure 1: KRT2-S Front View

Button	Function	Usage
	ON / OFF	Self-locking switch
	DUAL WATCH	<ol style="list-style-type: none"> Scanning between the Active and Standby frequencies Positioning cursor to the left when programming the station identifier
	AUDIO SELECT	<ol style="list-style-type: none"> Stepping through the audio menus VOL SQ VOX TX INT EXT DIM CON SIT and MIC Positioning cursor to the right when programming the station identifier
	FAVORITES	<ol style="list-style-type: none"> Frequency and identifier selection from the favourites list Programming of favourites (frequency and identifier)
	EXCHANGE	Exchange of the Active and Standby frequencies
	TURNING KNOB	Pressing for Selection of the frequency range to: MHz, 100kHz, 10kHz Toggles between frequency and identifier when programming the favourites Sets all variable values in any menu <ul style="list-style-type: none"> Volume setting of headsets and speakers MHz/kHz selection of the standby frequency in 3 different ranges Favourite selection Alpha character selection when programming favourites Change of microphone settings

Table 4: KRT2 Controls

PÅ/Avstängning

ON-knappen (Överst till vänster)

Ställa in frekvens manuellt

Tryck in **FREQ** knappen (nere mitten stort vred) och vrid in MHz,

Tryck igen och vrid för att ställa in första decimalen

Tryck igen och vrid för att ställa in sista 2 decimalerna

Avsluta med **BYTA** knappen (nere höger pil upp-pil ner) /vänta 20 sek

Välja frekvens från minneslista

Tryck **MEM** knappen (nere vänster)

Vrid på **FREQ** knappen och markera frekvensen

Avsluta med **BYTA** knappen/vänta 20 sek

Skifta Active och Standby frekvens

Tryck på **BYTA** knappen

Ändra volym

Vrid **FREQ** knappen

Ändra Squelch

Tryck en gång på **AUD** knappen

Vrid på **FREQ** knappen

Lyssna på två frekvenser (Active+Standby) samtidigt

Tryck på **DUAL** knappen (överst mitten) för av / på